


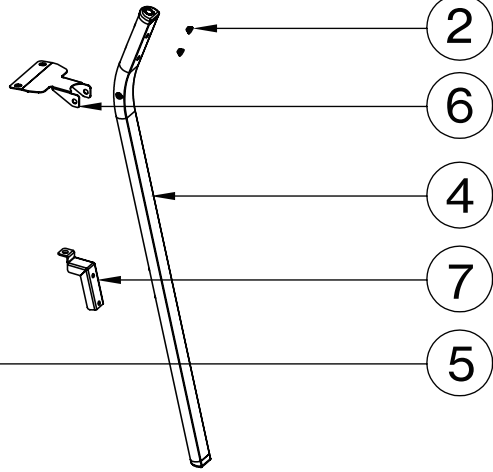
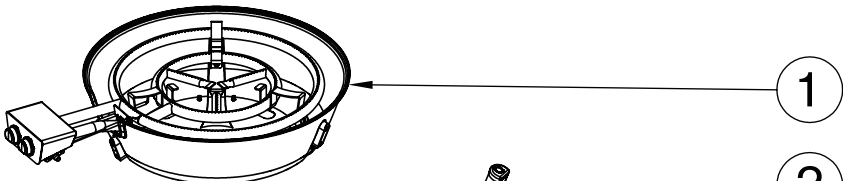
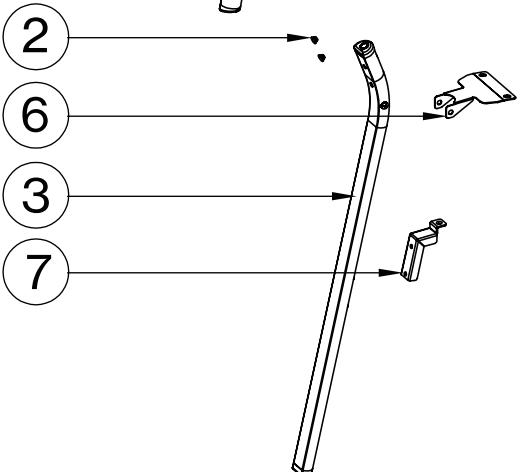
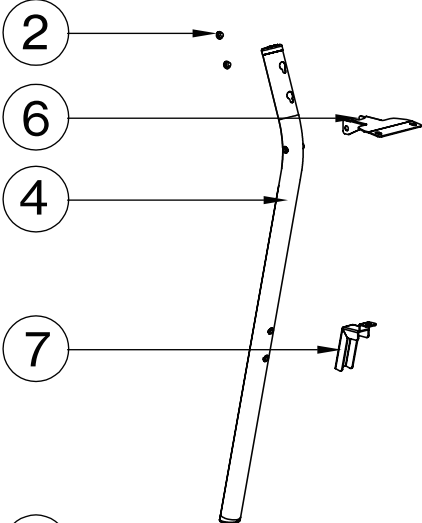





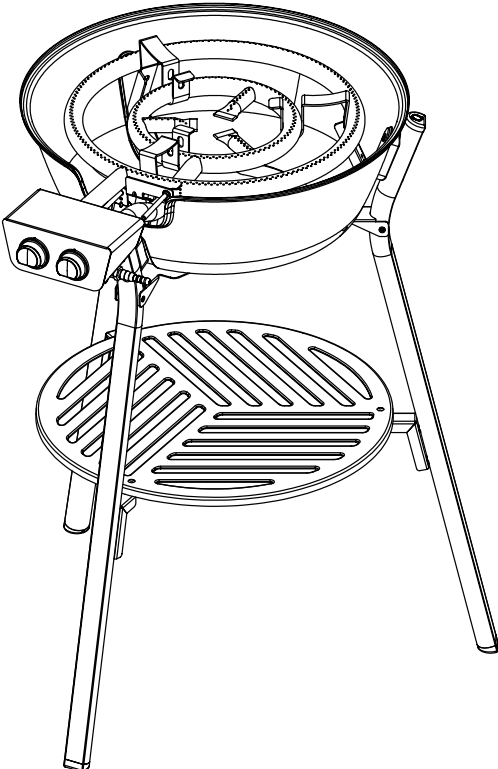


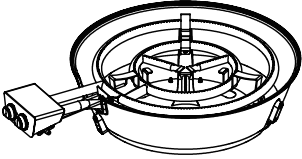

EXPLODED VIEW

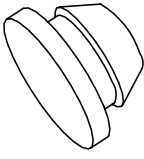

  PART LIST

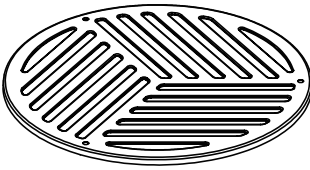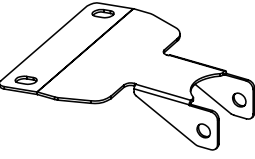
1 1 PC 	2 6 PCS 	3 1 PC 	4 2 PCS 
5 1 PC 	6 3 PCS 	7 3 PCS  For 48 LL	7 3 PCS  For 58 & 78 LL

A 1 PC 	B M6x10 21 PCS 
--	---


ASSEMBLY

STEP 1 B M6x10 4 PCS

For 48 LL

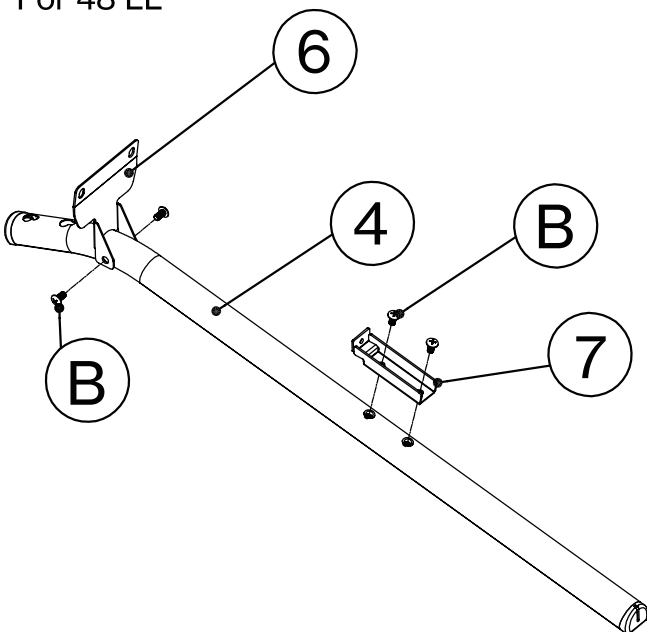

For 58 & 78 LL


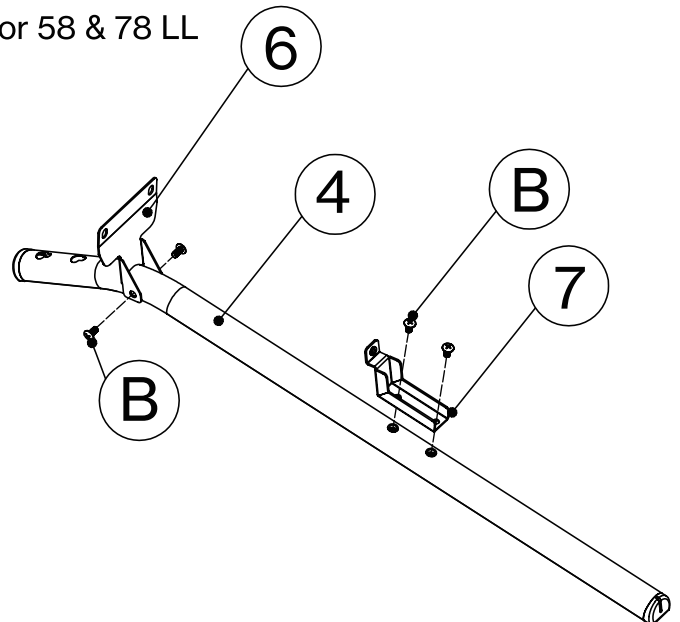


ASSEMBLY


STEP 2 **B** M6x10 4 PCS

For 48 LL

For 58 & 78 LL

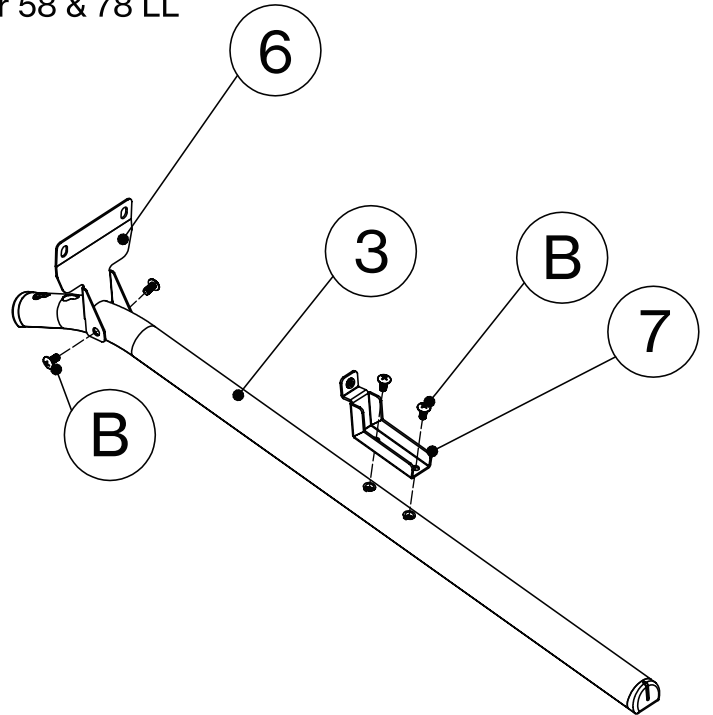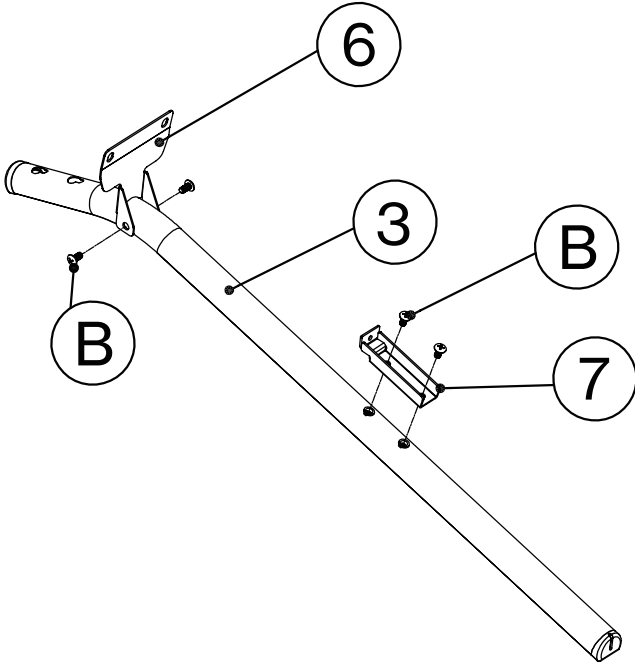


STEP 3 **B** M6x10 6 PCS

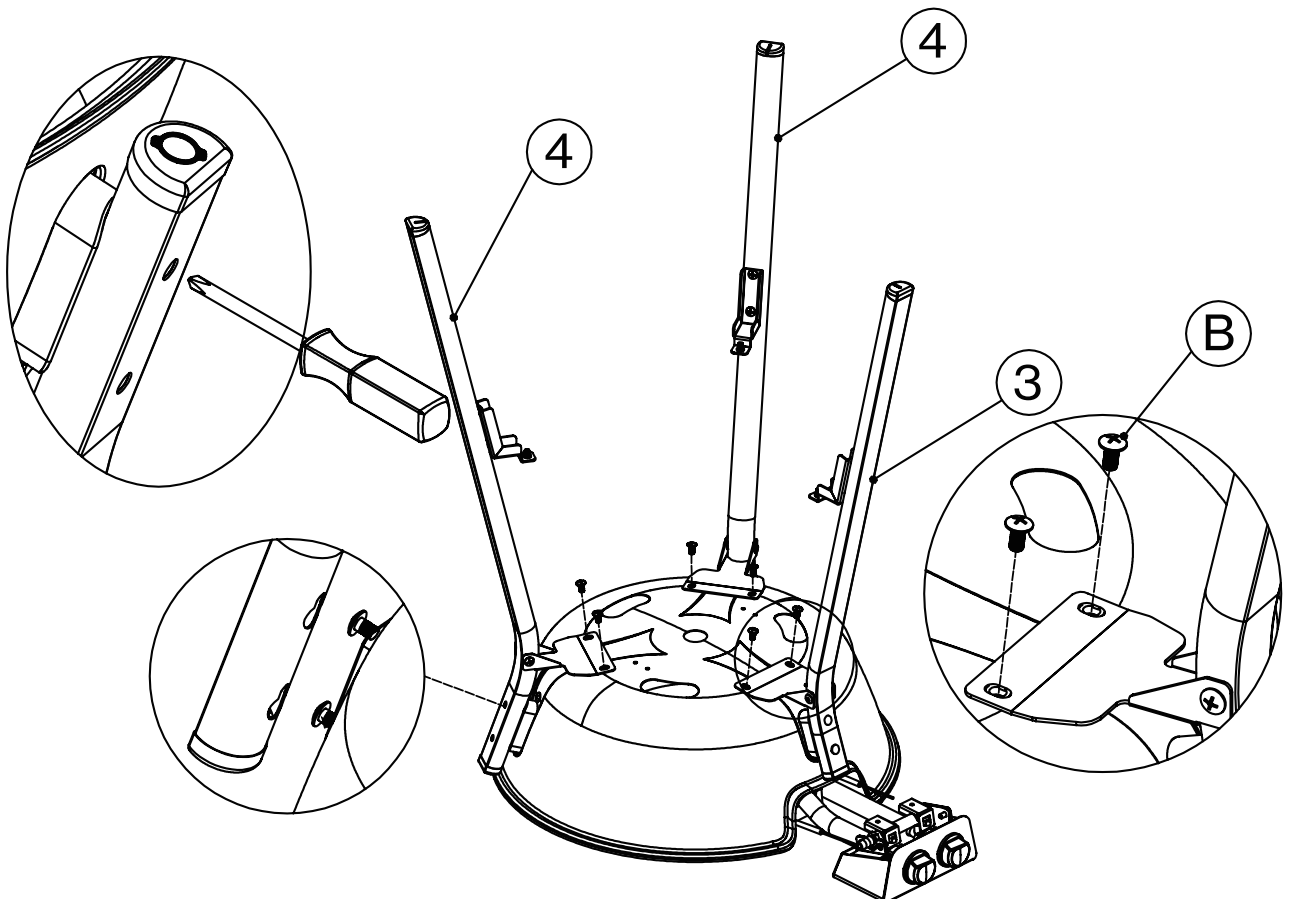

ASSEMBLY


STEP 4 **B** M6x10 3 PCS

For 48 LL

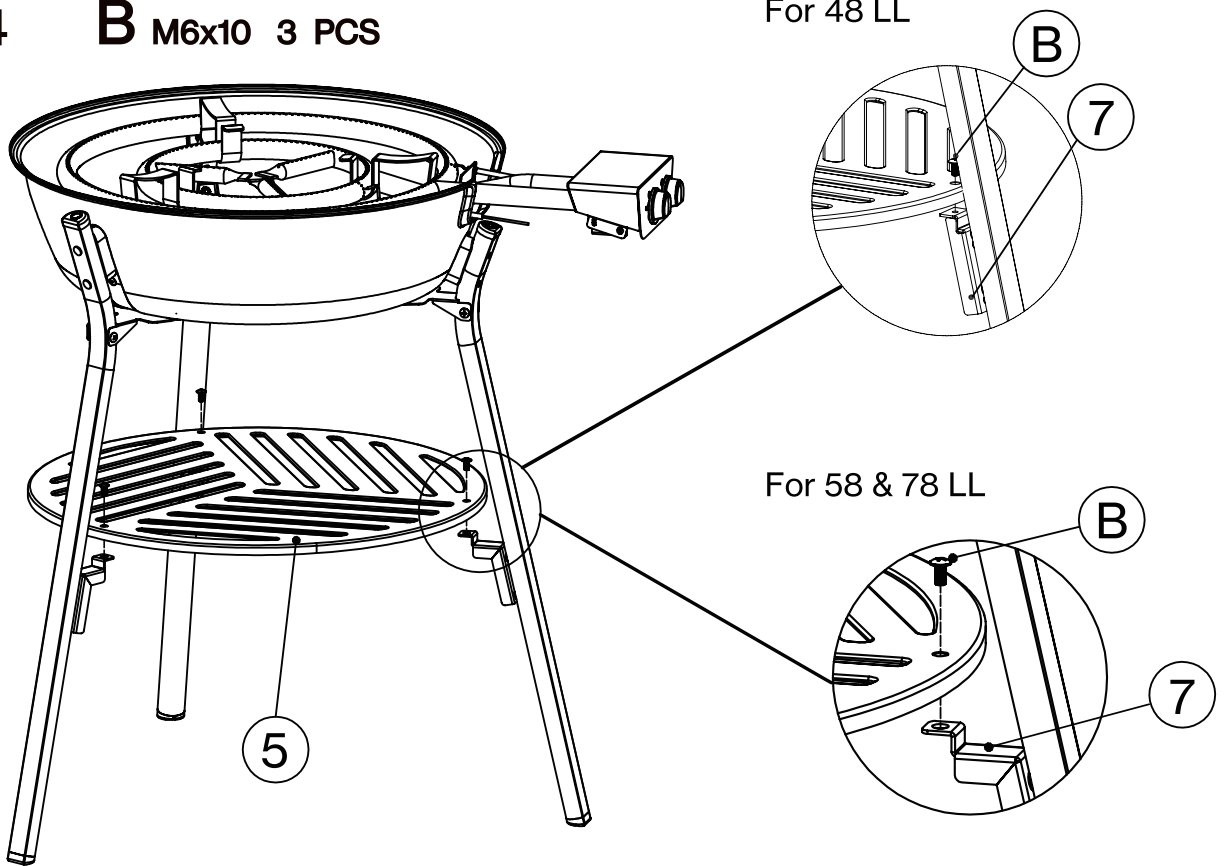

For 58 & 78 LL

STEP 5

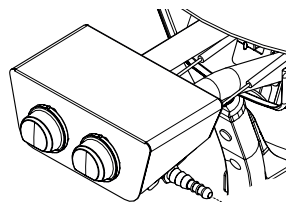

Please remove the cap before use.

